



THE PORCH STORE

UNIQUE PORCH COMPONENTS

www.porch-store.com

BED SWING ASSEMBLY

For Porch Store Bed Swings

Please ensure that your structure is strong enough to support 1,000 lbs.

Read through [these hanging details](https://porchco.com/wp-content/uploads/2020/07/Bed-Swing-Eye-Bolt-Placement.pdf) for information on securing your eye bolts.

(<https://porchco.com/wp-content/uploads/2020/07/Bed-Swing-Eye-Bolt-Placement.pdf>)

Assembly is as easy as 1 - 2 - 3!

1. Lay support boards down across the bottom of the frame, evenly spaced:



2. Set the back in place by angling one side forwards and sliding into desired notches.



When using the forward notch, be sure to rest the bottom horizontal piece of the back in front of the small, wooden support for a comfortable lean.

www.porchstore.com

615-730-8067



THE PORCH STORE

UNIQUE PORCH COMPONENTS


www.porch-store.com

BED SWING ASSEMBLY

For Porch Store Bed Swings

3. Attach the ropes! Hook the provided carabiners that are attached to your ropes to the eye bolts on your swing. Then attach the provided S hook, chain, and other S hook to the top of your ropes. The top S hook will attach to the eye bolts in your ceiling. And now---relax!!


THE PORCH COMPANY 2 POINTSWING ROPES ORDER OF OPERATIONS WHEN HANGING SWING

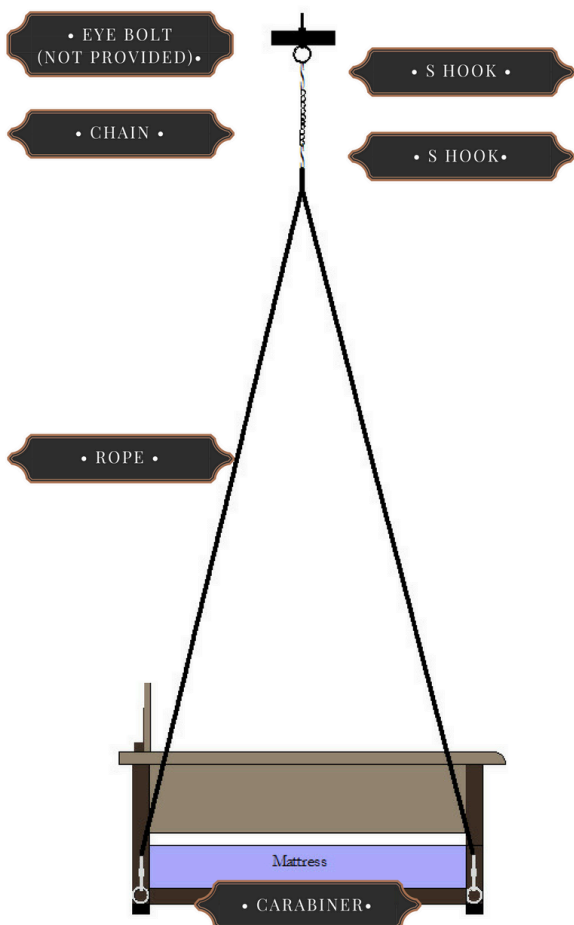

EYE BOLTS FOR HANGING ARE NOT PROVIDED AND MUST BE INSTALLED BY PURCHASER. YOU ARE RESPONSIBLE FOR ENSURING THE HOOKS IN THE CEILING ARE STRONG ENOUGH TO SUPPORT THE NECESSARY WEIGHT.



THE PORCH COMPANY 4 POINTSWING ROPES ORDER OF OPERATIONS WHEN HANGING SWING

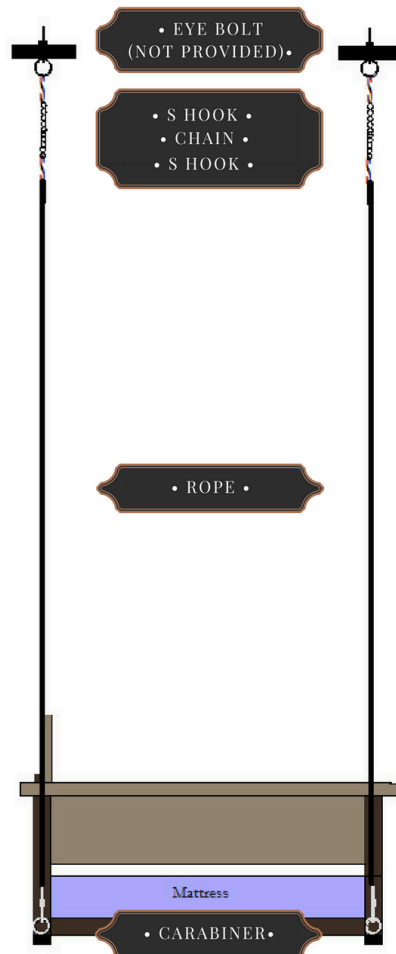

EYE BOLTS FOR HANGING ARE NOT PROVIDED AND MUST BE INSTALLED BY PURCHASER. YOU ARE RESPONSIBLE FOR ENSURING THE HOOKS IN THE CEILING ARE STRONG ENOUGH TO SUPPORT THE NECESSARY WEIGHT.

